


UC864/CC864 Windows 2000, Xp, Vista, and 7 Driver

Operative Instructions

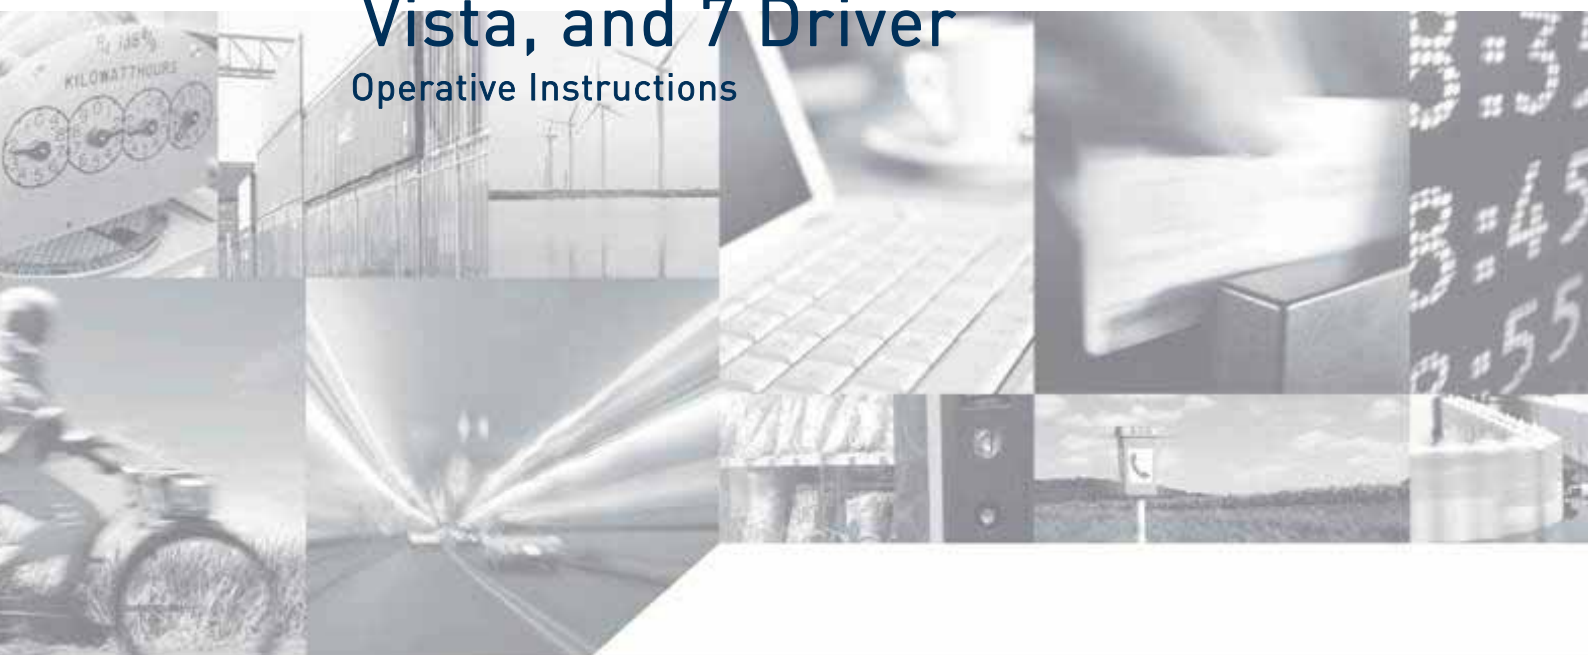

Disclaimer

The information contained in this document is the proprietary information of Telit Communications S.p.A. and its affiliates ("TELIT").

The contents are confidential and any disclosure to persons other than the officers, employees, agents or subcontractors of the owner or licensee of this document, without the prior written consent of Telit, is strictly prohibited.

Telit makes every effort to ensure the quality of the information it makes available. Notwithstanding the foregoing, Telit does not make any warranty as to the information contained herein, and does not accept any liability for any injury, loss or damage of any kind incurred by use of or reliance upon the information.

Telit disclaims any and all responsibility for the application of the devices characterized in this document, and notes that the application of the device must comply with the safety standards of the applicable country, and where applicable, with the relevant wiring rules.

Telit reserves the right to make modifications, additions and deletions to this document due to typographical errors, inaccurate information, or improvements to programs and/or equipment at any time and without notice. Such changes will, nevertheless be incorporated into new editions of this document.

Copyright: Transmittal, reproduction, dissemination and/or editing of this document as well as utilization of its contents and communication thereof to others without express authorization are prohibited. Offenders will be held liable for payment of damages. All rights are reserved.

Copyright © Telit Communications S.p.A. 2010.



UC864-CC864 Windows 2000, Xp, Vista and 7 Driver – Operative Instruction

Applicable Products

Product	Supported
ALL UC864	√
ALL CC864	√



Contents

1	<i>Introduction</i>	5
1.1	Scope.....	5
1.2	Audience.....	5
1.3	Contact Information, Support.....	5
1.4	Product Overview	5
1.5	Document Organization	6
1.6	Text Conventions	6
2	<i>Requisites</i>	7
3	<i>USB driver download and installation</i>	8
4	<i>Dial-Up Connection</i>	14
4.1	Creation of dialup connection on HSDPA USB Modem port.....	14
4.2	Connect using Dial-Up (USB mode)	19



1 Introduction

1.1 Scope

This document should provide information needed to install the USB drivers for Telit modules.

1.2 Audience

This User Guide is intended for users who need to install and use UC864 or CC864 Telit modem.

1.3 Contact Information, Support

Our aim is to make this guide as helpful as possible. Keep us informed of your comments and suggestions for improvements.

For general contact, technical support, report documentation errors and to order manuals, contact Telit's Technical Support Center at:

TS-EMEA@telit.com or <http://www.telit.com/en/products/technical-support-center/contact.php>

Telit appreciates feedback from the users of our information.

1.4 Product Overview

UC864 modules contains a fully featured HSDPA modem and UMTS/GSM/GPRS module, compatible with the other Telit GSM/GPRS modules.

CC864 modules contains a fully features CDMA modem compatible with the other Telit GSM/GPRS modules.



This manual contains the following chapters:

- This section lists the paragraph and font styles used for the various types of information presented in this user guide.

Format	Content
Arial monospaced	Filesystem paths, and Windows Xp menu items

2 Requisites

Below are the HW and SW requisites to install CC/UC864 module:

- PC with Windows 2000, XP, Vista and 7 OS installed,
- CC86/UC864 module,
- CC864/UC864 USB Drivers for Windows 2000, XP, Vista and 7 (to get the driver, please contact Telit Support (TS-EMEA@telit.com)).



3 USB driver download and installation

The TelitUSBInstaller.exe file needs to be available on the PC used for the income procedure.

To install the USB driver follow the following steps:


1. Download driver archive and uncompress it in a specific directory (e.g. c:\Telit_Usb_driver) to be selected afterwards during the installation procedure.
2. Start TelitUSBInstaller.exe application.



3. Click “Next >” button to install the driver.




UC864-CC864 Windows 2000, Xp, Vista and 7 Driver – Operative Instruction

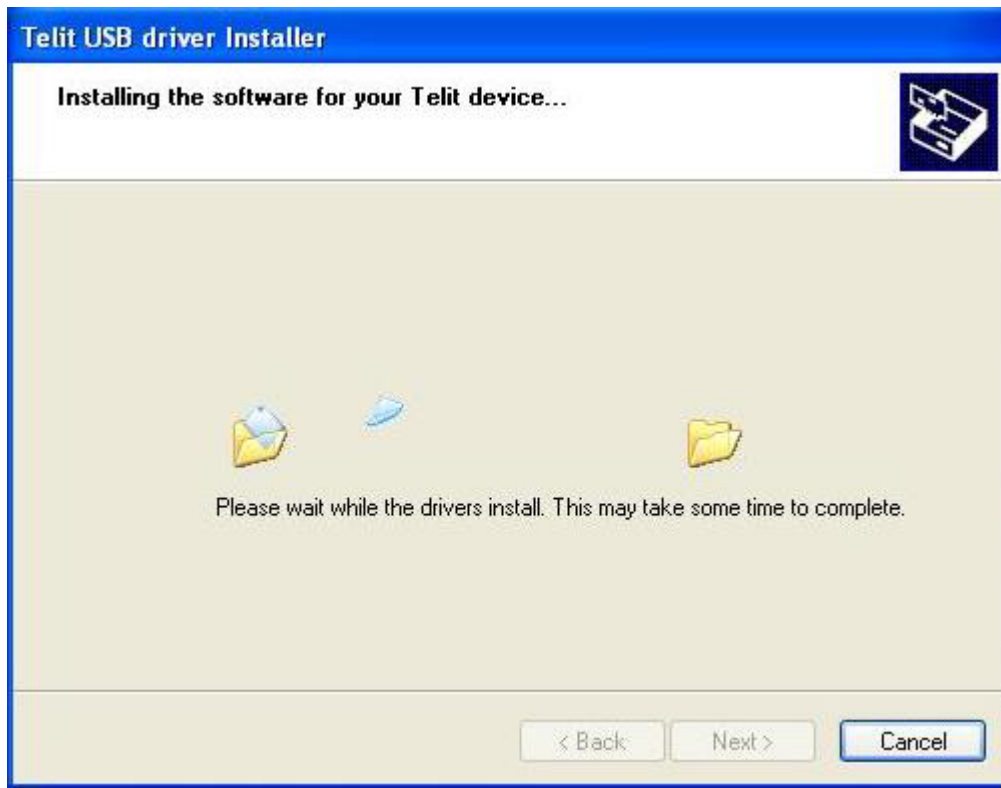

4. If appear one of these windows click "Continue Anyway" or "Install this driver software anyway".





UC864-CC864 Windows 2000, Xp, Vista and 7 Driver – Operative Instruction

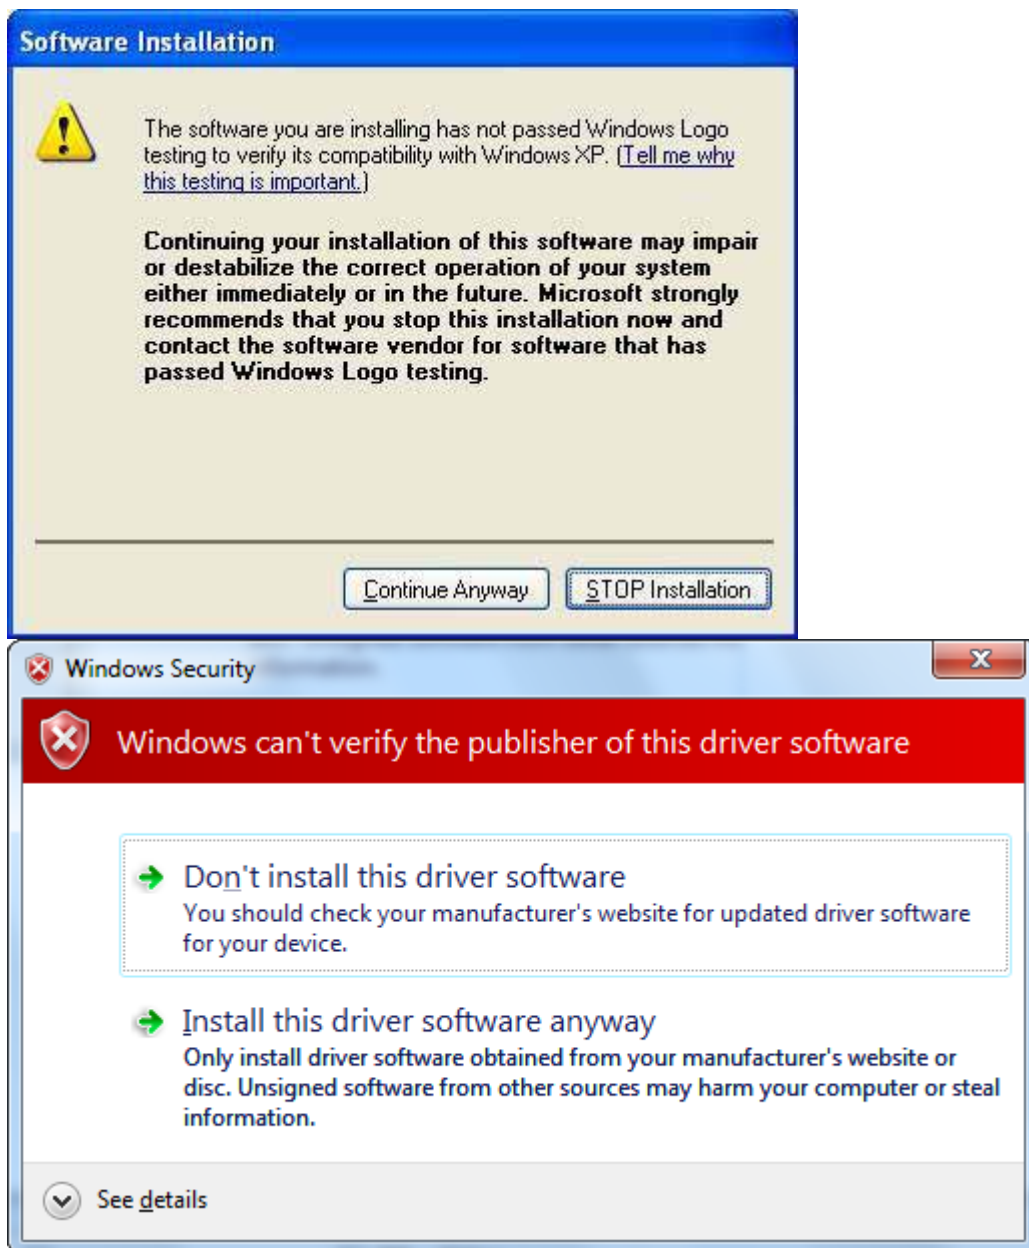

 5. The driver is now installed, click now "Finish" to close the installer application.



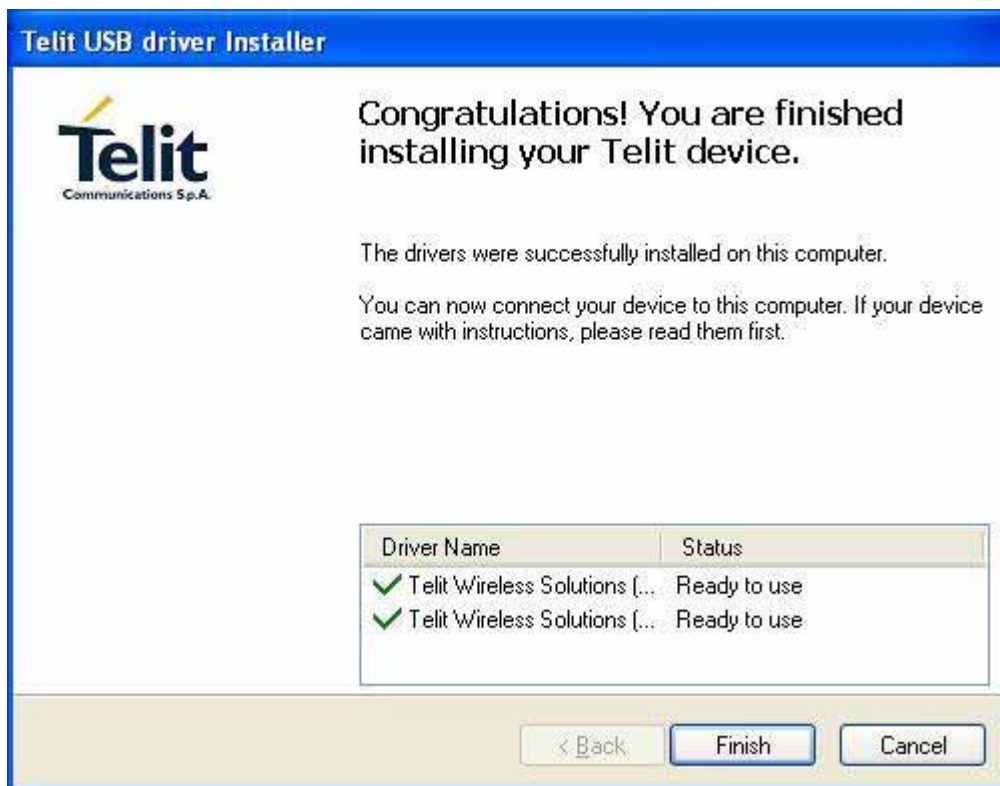


At the end of the installation 3 ports are finally installed in the system:

- a) Telit HSDPA USB Modem
- b) Telit Auxiliary port
- c) Telit Diagnostic interface



UC864-CC864 Windows 2000, Xp, Vista and 7 Driver – Operative Instruction

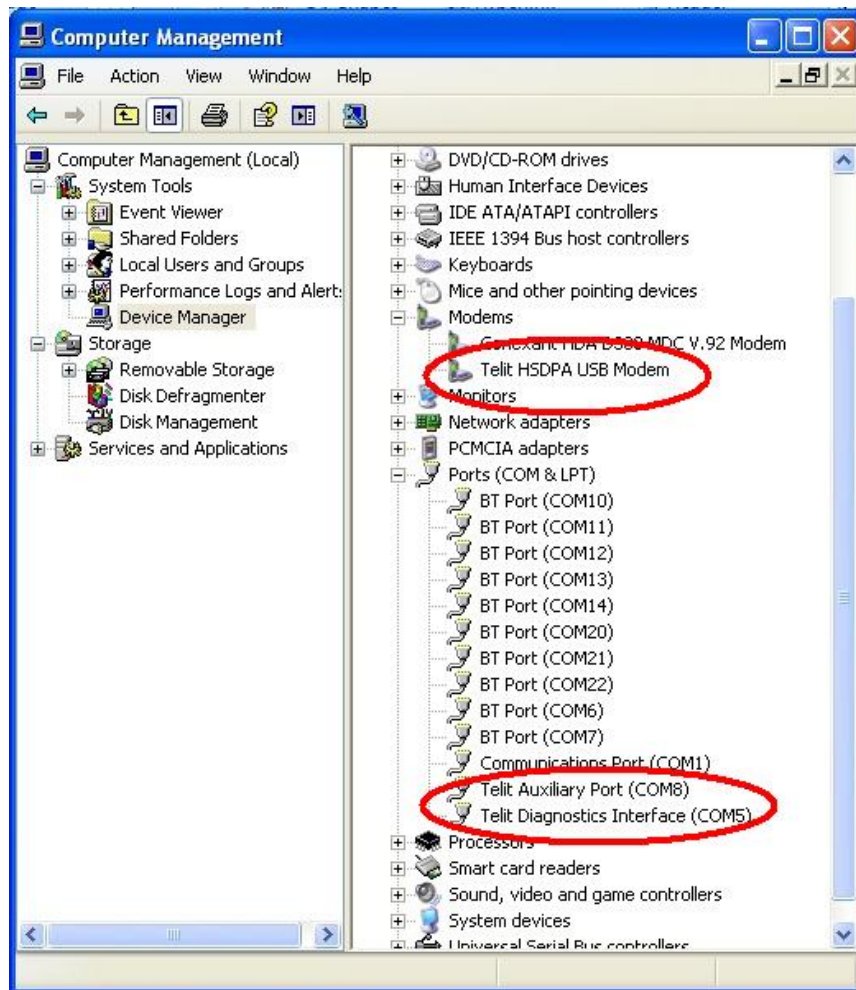

In case modem provides Nmea port 4 ports are installed in the system:

- Telit HSDPA USB Modem
- Telit Auxiliary port
- Telit Diagnostic interface
- Telit Nmea Port






4 Dial-Up Connection

4.1 Creation of dialup connection on HSDPA USB Modem port


To create a Dial-Up connection:

1. Click on Start->Control Panel. Then click on “Network and Internet connections” as shown in the following picture.

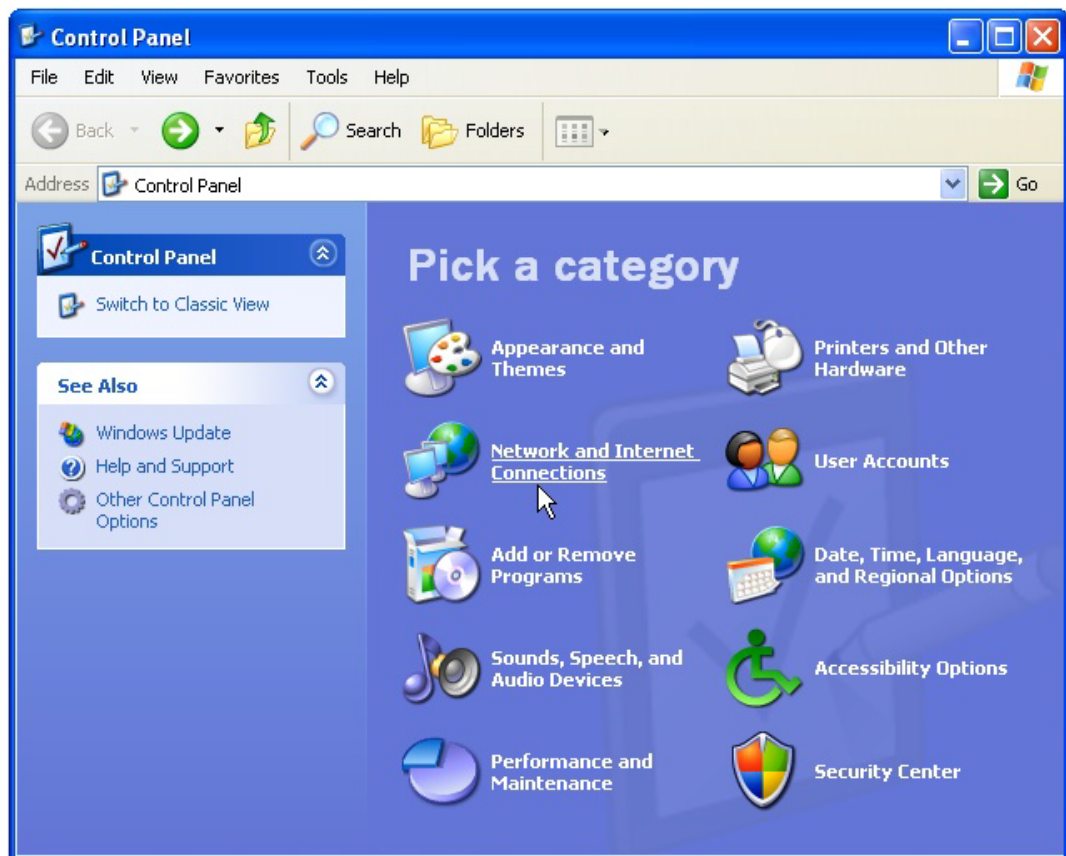

UC864-CC864 Windows 2000, Xp, Vista and 7 Driver – Operative Instruction

- Click on “Create a connection to the network at your workspace”

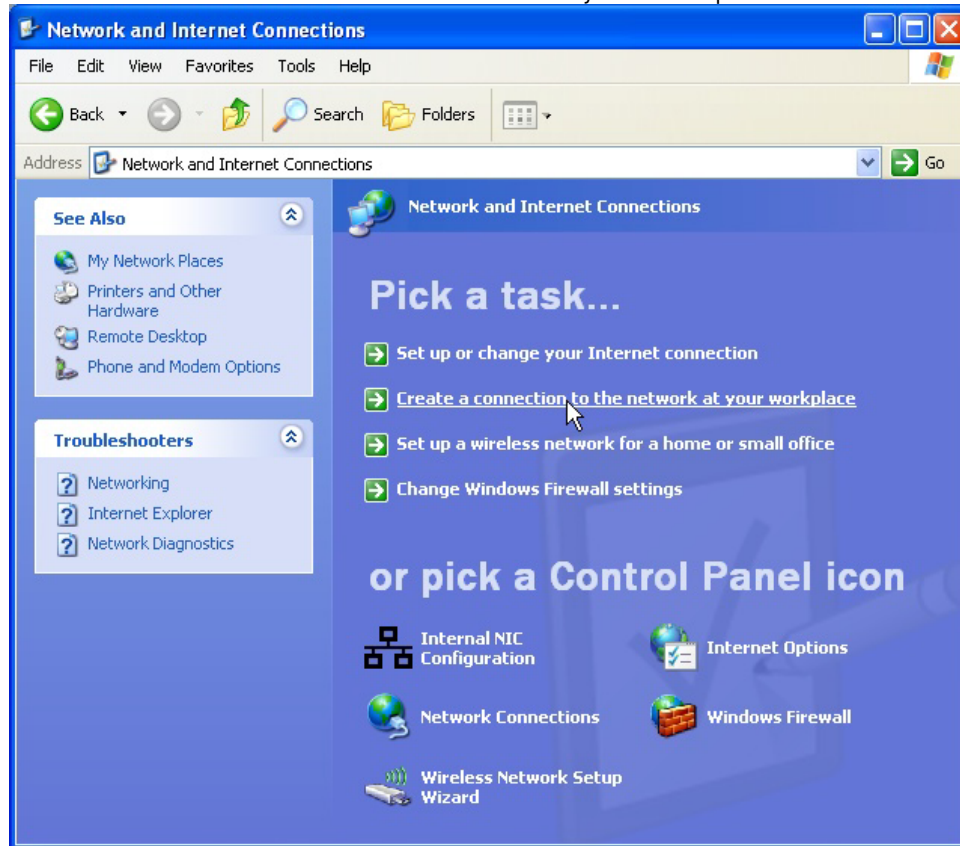


- Tick “Dial-up connection” checkbox , then click “Next”.




UC864-CC864 Windows 2000, Xp, Vista and 7 Driver – Operative Instruction

4. Check the “Modem – Telit HSDPA USB Modem” then click “Next” checkbox. Please note that the example reported is related to the installation of one of the Telit Uc864 modules.

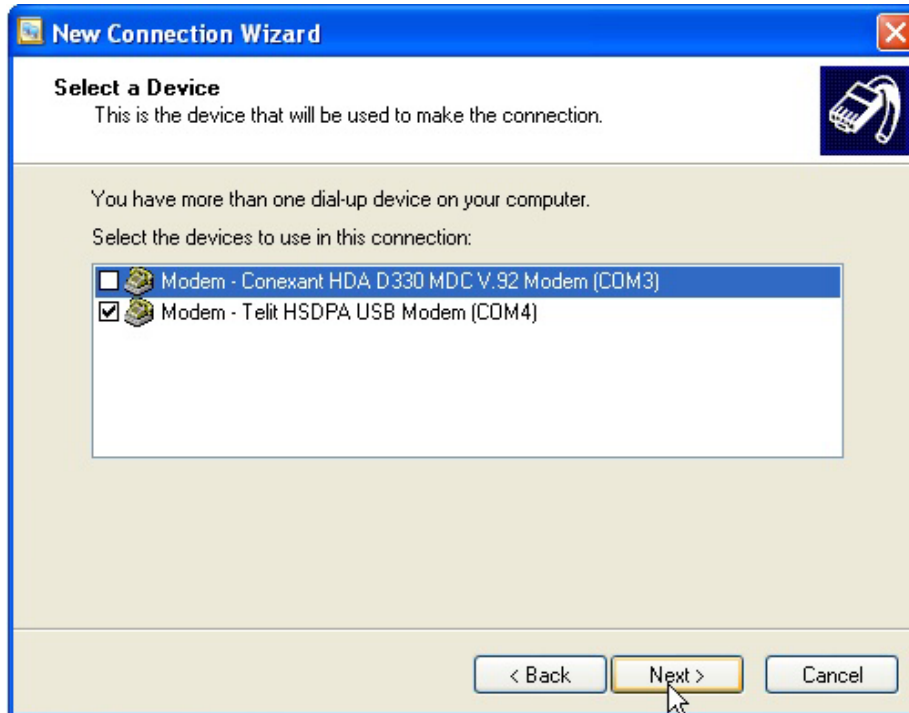

5. Type a name for the new connection then click “Next”

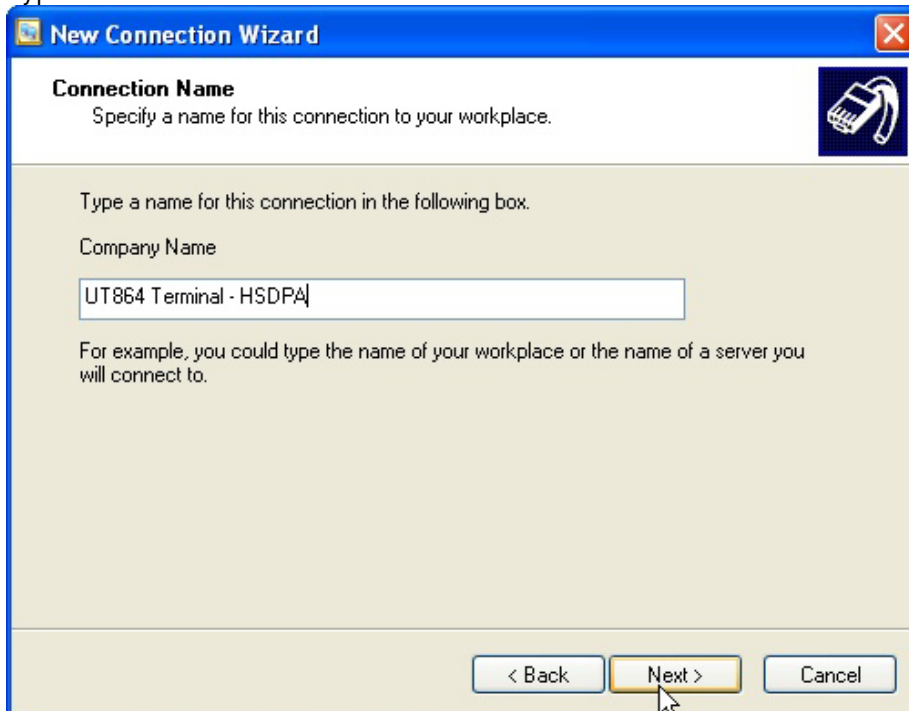

UC864-CC864 Windows 2000, Xp, Vista and 7 Driver – Operative Instruction

6. Type the phone number “*99***1#” then click “Next”.



New Connection Wizard

Phone Number to Dial
What is the phone number you will use to make this connection?


Type the phone number below.

Phone number:
*99***1#

You might need to include a "1" or the area code, or both. If you are not sure you need the extra numbers, dial the phone number on your telephone. If you hear a modem sound, the number dialed is correct.

< Back **Next >** Cancel

7. Tick “Do not use my smart card” radio button then click “Next”

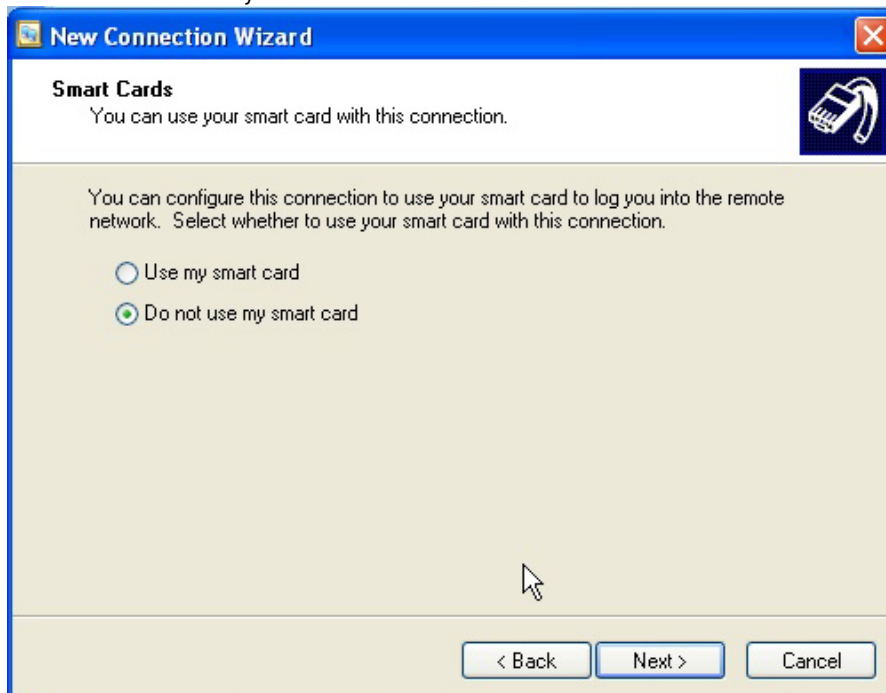

New Connection Wizard

Smart Cards
You can use your smart card with this connection.

You can configure this connection to use your smart card to log you into the remote network. Select whether to use your smart card with this connection.

☐ Use my smart card
☒ Do not use my smart card

< Back **Next >** Cancel

UC864-CC864 Windows 2000, Xp, Vista and 7 Driver – Operative Instruction

8. Check "Add a shortcut.." checkbox then Click "Finish" to complete the procedure.



 
4.2 Connect using Dial-Up (USB mode)

To connect using the Dial-Up click twice on the icon in the desktop,



or click Start→Connect to→UC864 Terminal – HSDPA







Click “Dial” in “Connect UC864 Terminal” window



The windows below should appear, and after them the connection is active.

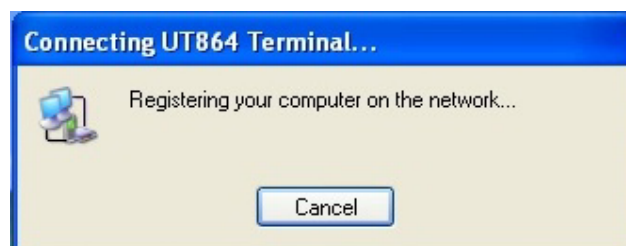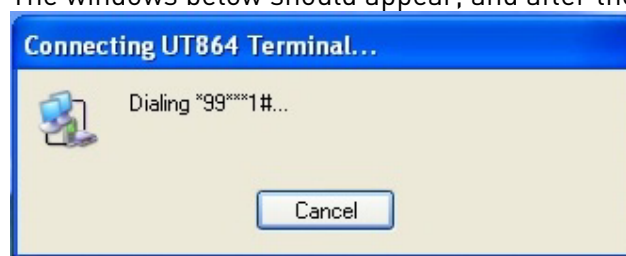

UC864-CC864 Windows 2000, Xp, Vista and 7 Driver – Operative Instruction

Browse the Internet to check that connection is available.

